


Technics

Stereo Integrated DC Amplifier

SU-V3

OPERATING INSTRUCTIONS

CIA DALLEM.
45.80.21.81.

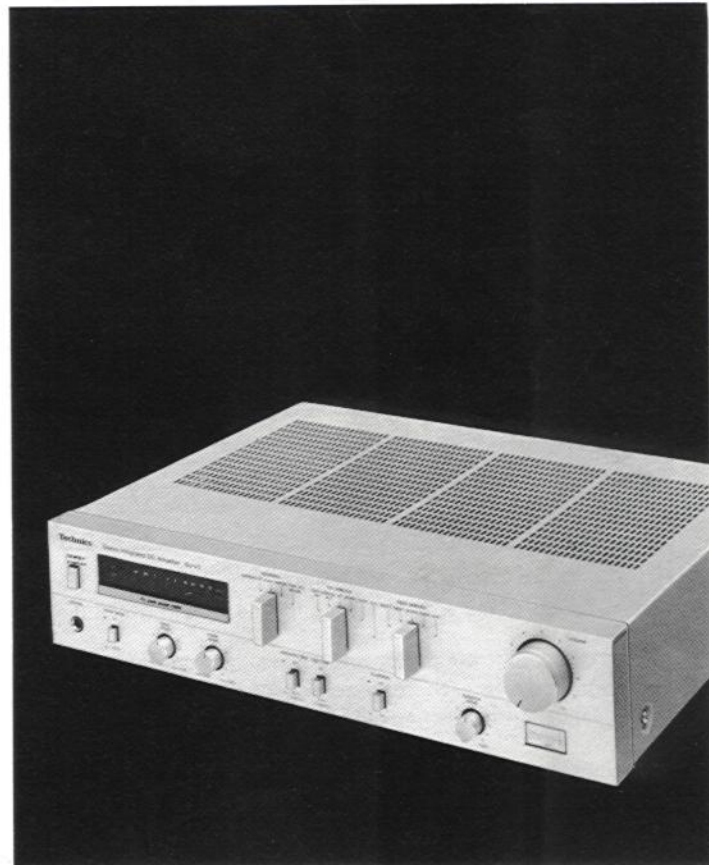

- Also available in black.
- Configuration of ventilation holes differs according to area.

(L ch)
PHONO
GND

(R ch)
PHONO

(L ch)
TUNER

AUX

REC OUT
TAPE 1

PLAYBACK

REC OUT
TAPE 2

PLAYBACK

(R ch)
TUNER




AUX


REC OUT
TAPE 1

PLAYBACK

REC OUT
TAPE 2

PLAYBACK

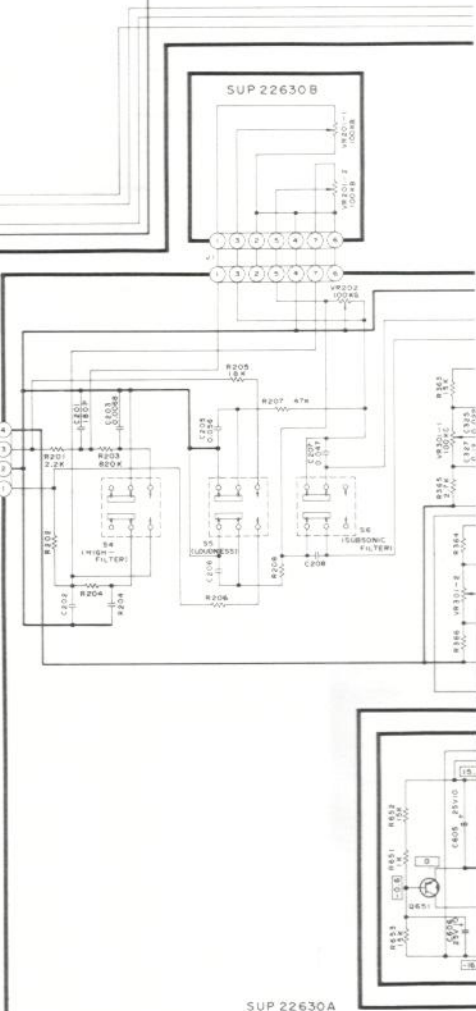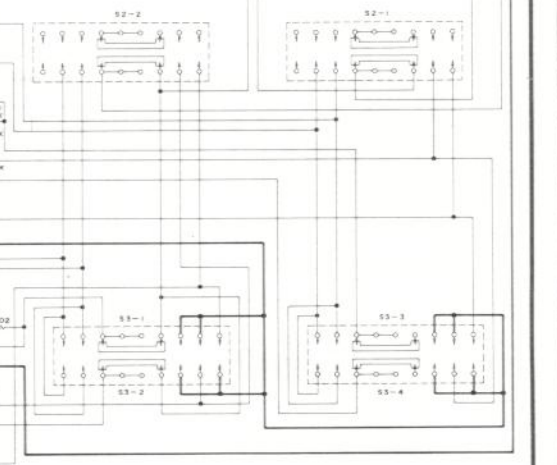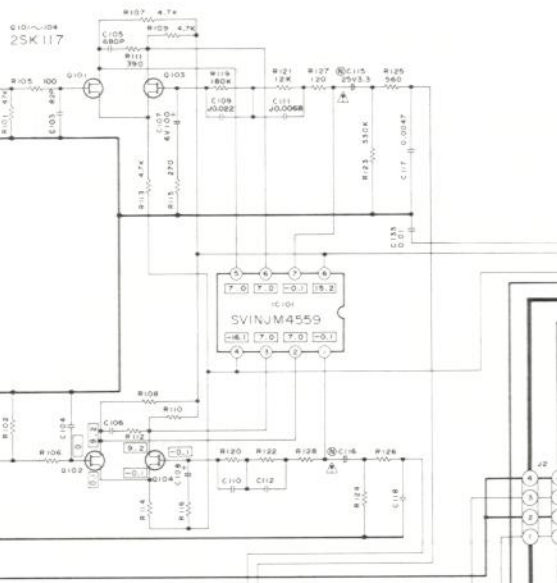

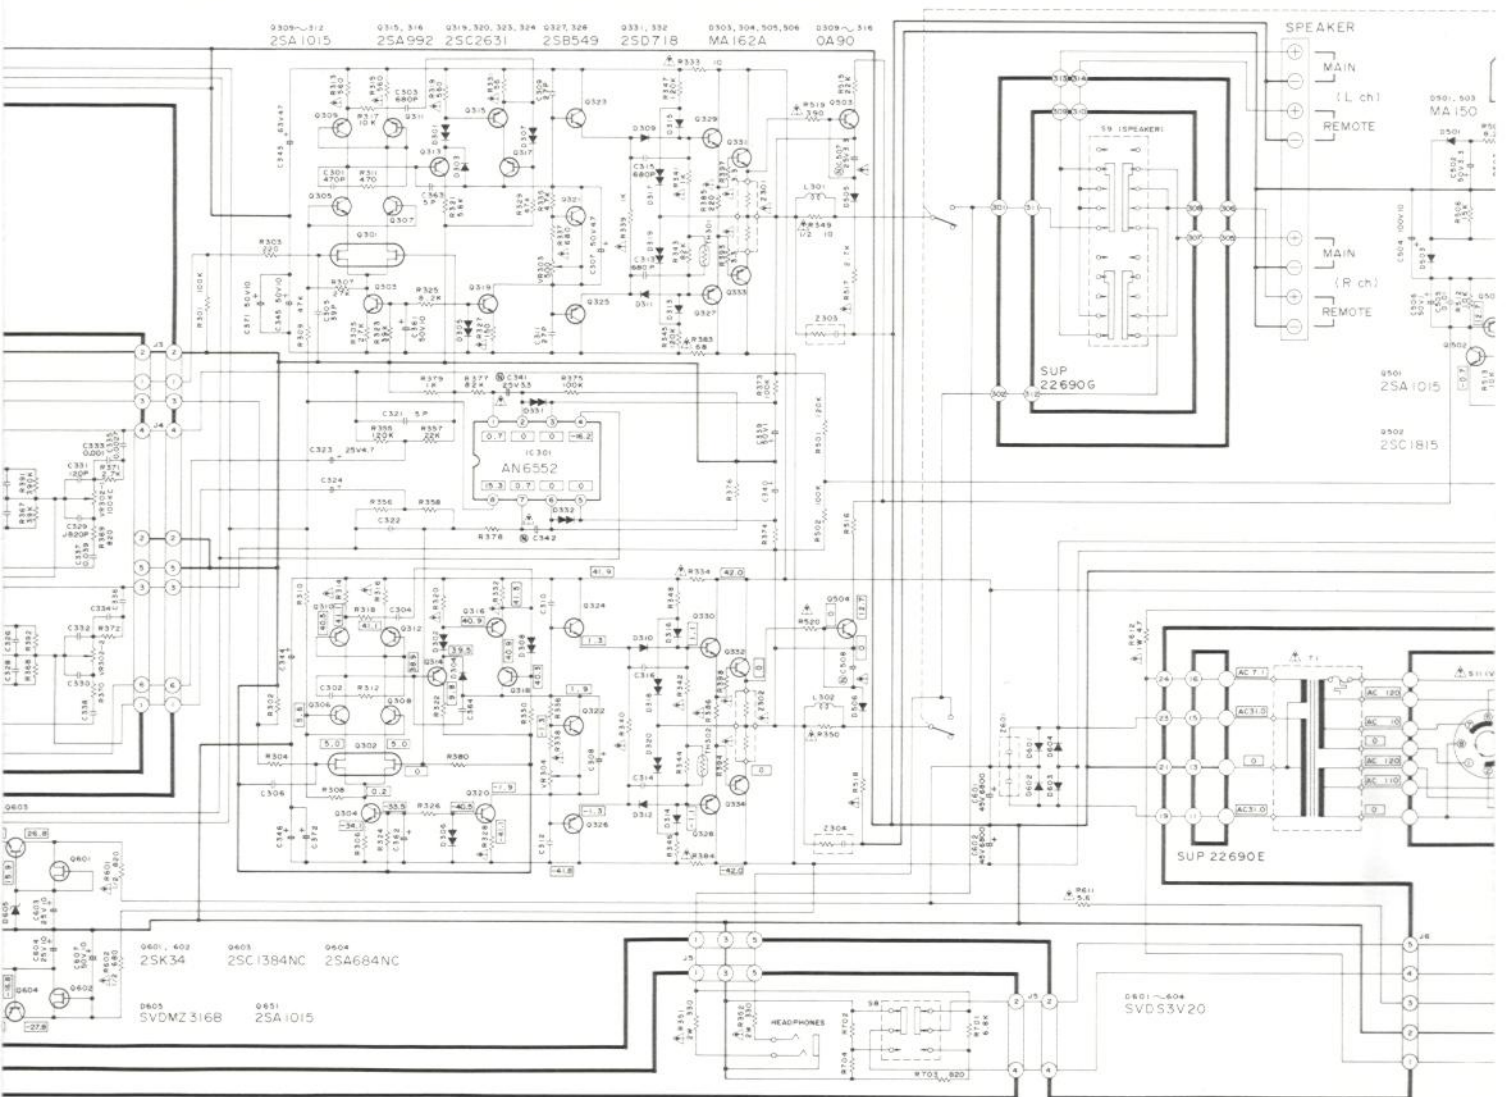0301, 302
2SK1090303~308, 309, 304
2SC18450313, 314
2SA9920317, 318, 325, 324
2SA11230321, 322
2SD6610329, 330
2SD4150355, 334
2SB6880301, 302, 305~308, 317~320, 331, 332
MA26-20309~312
2SA10150315, 316
2SA9920319, 320, 323, 324
2SC26310321, 324
2SB5490331, 332
2SD7180303, 304, 305, 306
MA162A0309~316
OA90



25A 1124 25C 1815
25A 3920 25C 1845
25A 1015 25C 2632



25K 117



25K 34



25D 415
25E 549



25D 661



25B 600
25D 718



25D 836



25K 109



SV1A 7317P
SV1A 7318P



AN 6552



SV1M 4559D5




SV1H 12010

NOTES

1. S₂ Input selector switch in "phono" position.
tape 2 → tape 1 → phono → tuner → aux
2. S₃ Rec selector switch in "phono" position.
tape 2 → tape 1 → 2 → off → phono → tuner → aux
3. S₄ High filter switch in "off" position.
4. S₅ Loudness control switch in "off" position.
5. S₆ Subsonic filter switch in "off" position.
6. S₈ FL range selector in "x 1" position. (x 1 → x 0.01)
7. S₉ Speaker selector in "main" position.
8. S₁₀ Power switch in "on" position.
9. S₁₁ Voltage selector in "220V" position.

(XA)

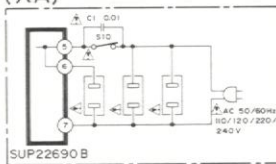

(XL)

